



## NR-5S MANUAL OPERATING MECHANISM

Type of operating mechanism	Wiring diagram	Electromagnetic supply voltage	Heater supply voltage	Type of pillar	Housing box colour
NR5S	-0004	/B1	/G9	/E	/S
Manual, up/down (plane) type	XXXX – wiring diagram is set and confirmed by the client before placing the order	no marking – without electromagnetic interlock B1 – 220VDC B3 – 110VDC	G1 – 220VDC G9 – 230VAC G3 – 110VDC	E – round Z – square	S – grey Z – yellow

### Example: NR5S-0004/B1/G9/E/S

Manual operating mechanism up/down (plane) type, wiring diagram 0004 (set and confirmed at the stage placing the order), electromagnetic interlock 220VDC, heater 230VAC, adapted to a round pillar, grey housing box.

Additional, placing the order need to be determined distance between disconnector and operating mechanism.